

bastion



P2 Respirators




P2 Respirators

- Latex free dual straps
- Optional valves to assist breathing by expelling hot air
- Lightweight and comfortable fit
- Adjustable nose bar
- Blue straps for easy identification
- Red straps on active carbon type for easy identification

Fitting:

IMPORTANT The type of respirator in the box is indicated on the front of the box. See instructions for use. Use before expiry date indicated on this pack

1. Hold the mask in hand with the metal nosepiece up. Allow headbands to hang freely.
2. Position the mask under the chin, covering mouth and nose.
3. Pull the lower headband over the head, position below ears. Pull the top headband on the back of head above ears for best fit.
4. Press soft metal nosepiece to conform snugly around the nose.
5. To check fit, cup both hands over the mask and exhale vigorously. If air flows around nose, tighten the nosepiece. If air leaks around the edge, reposition the headband for better fit. Retest the seal and repeat the procedure until the mask is sealed properly

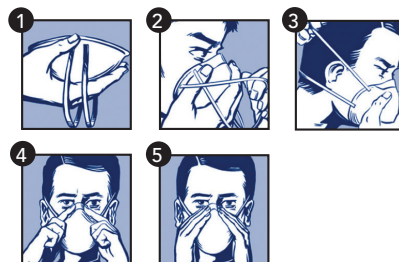

P2 uses include:

Protects against mechanically and thermally generated particles such as toxic dusts, mists and fumes.

- Medical
- Sanding
- Drilling
- Sawing
- Sweeping
- Welding
- Grinding
- Fibreglass production
- Asbestos removal

P2 with carbon uses include:

Protects against mechanically and thermally generated particles such as toxic dusts, mists and fumes including organic vapours and ozone.

- Medical
- Sanding
- Drilling
- Sawing
- Sweeping
- Welding
- Grinding
- Fibreglass production
- Asbestos removal
- Chemical handling
- Spray painting

Product description:

Code	Type	Inners Per Carton	Quantity Per Inner	Quantity Per Carton
BNR22523	Standard	20	20	400
BNR22524	With Valve	20	12	240
BNR22525	With Valve and Active Carbon	20	12	240

Compliance Standards: AS/NZS 1716:2012 certified